



1. Remove (2) 42" Wall Mounting Cleats from back of TV panel.
2. Use Stud finders and secure wall mounting cleats to wall studs in desired location left to right and use measurements shown for the location to mount the TV Panel.
3. Mount uplighting to top filler rail if not pre mounted, run wire from uplighting to power supply w/switch. Run wire from power supply thru wire access hole on either side if needed to access power supply in wall.
4. Hang TV panel on mounting cleats, center left to right to desired location, run power from power supply to wall outlet.

KLEM JASPER GROUP BRAND

Customer ID

Designed by EW Checked by EW Approved by-date

EW EW

JPL4976BP-A-01

Date 1/22/15 Scale

TVBack Panel Assembly

Size 3 1/4d x 49w x 76h Sheet