

Somna Replacement Arm Cap

Install Instructions

Tools Required

- Flat Prybar
- Soft Head Mallet



Installation

Note: Careful not to damage the upholstery cover during the removal and replacement of the arm cap.

1. Open box and remove the replacement arm cap from the carton.
2. Locate the arm cap on the sleeper sofa that is to be replaced.
3. Use caution not to damage the upholstery cover.
Starting on the back side of the arm, insert the flat side of the prybar between the bottom surface of the arm cap and top surface of the upholstered arm. Gently pry the arm cap upward, dislodging the arm cap 1/2 way out from the uph. arm frame as shown in Fig. A.
4. Remove the prybar from the back side of the arm then Insert the prybar in the center of the arm between bottom of the arm cap & the upholstery cover. Again, gently pry the arm cap upward, dislodging the arm cap 1/2 way out from the arm frame as shown in Fig. B.
5. Repeat prying the arm cap 1/2 way out in the front of the arm as shown in Fig. C.
6. Repeat the prying process, moving front to back until the entire arm cap is free from the top surface of the arm frame as shown in Fig. D.
7. Make sure the (6) holes in the uph. arm are free from excess foam and upholstery fabric. Align each of the (6) compression dowels attached on the bottom surface of the replacement arm cap with the holes in the top surface of the upholstered arm as shown in Fig. E.
8. Use a cloth or piece of cardboard to cover and protect the top surface of the arm cap as shown in Fig. F.
9. Starting on the back side of the arm, with the soft head mallet, gently strike the rear of the arm setting the cap 1/4 of the way into the arm as shown in Fig. G. Make sure to strike the top of the arm directly over the center locations of the metal compression dowels.
10. Repeat inserting the center and front sets of compression dowels only 1/4 of the way into the arm as shown in Fig. G. Again, make sure to strike the top of the arm directly over the center locations of the metal compression dowels.
11. Moving back to front, strike directly above each set of compression dowels and set 1/2 way into the arm. Repeat to set arm 3/4 of the way into the arm and then all the way into the arm until the arm cap is slightly compressed into the arm upholstery as shown in Fig. H.

NOTE: Make certain fingers can not get under the front, side, and back bottom edges of the arm cap & pull upward from the underside of the arm cap.

Figure A

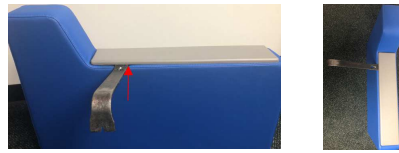


Figure B

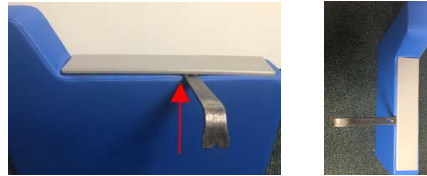


Figure C

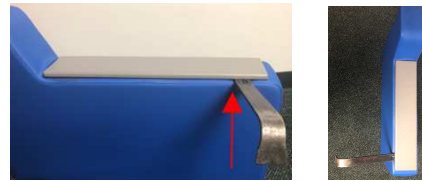


Figure D



Figure E



Figure F



Figure G



Figure H

