

# Double Height Wall Mount Overhead Cabinet

## Install Instructions

### Recommended Tools

- Knife
- Tape Measure
- Stud Finder
- Level
- Screw Driver

### Installation

Note: Due to the product weight, it is recommended two or more people help with the installation of the desk.

1. Identify the product's installation location. Then move and unpack box(es) near the final installation location.
2. Determine desired height from floor to top of cabinet (X).
3. To find height from floor to bottom of upper wall cleat, subtract ( $5\frac{31}{32}$ " ) from height determined in step 2. Lower wall cleat is to be 18" below upper cleat (Figure 2).
4. Locate studs in wall. Position and level wall cleats on wall. Use screws to attach cleats to studs.
5. Hang cabinet on wall cleats.

Figure 1

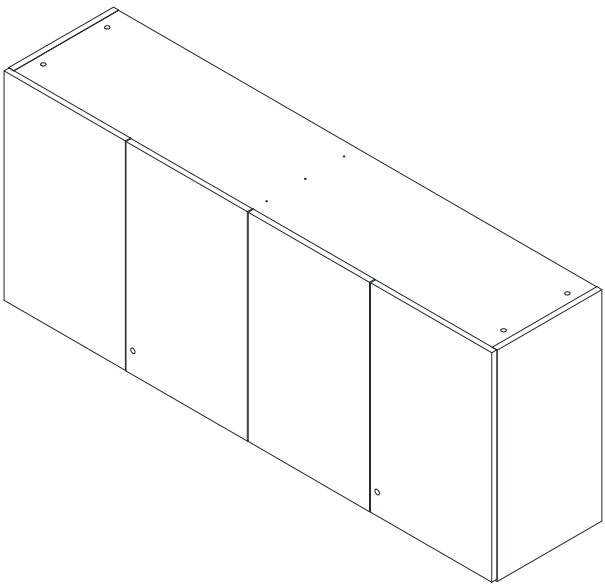


Figure 2

