

Wall Mount Overhead Cabinet

Install Instructions

Recommended Tools

- Knife
- Tape Measure
- Stud Finder
- Level
- Screw Driver

Installation

Note: Due to the product weight, it is recommended two or more people help with the installation of the desk.

1. Identify the product's installation location. Then move and unpack box(es) near the final installation location.
2. Determine desired height from floor to top of cabinet (X).
3. To find height from floor to bottom of wall cleat, subtract (5_31/32") from height determined in step 2 (Figure 2).
4. Locate studs in wall. Position and level wall cleat on wall. Use screws to attach cleat to studs.
5. Hang cabinet on wall cleat.

Figure 1

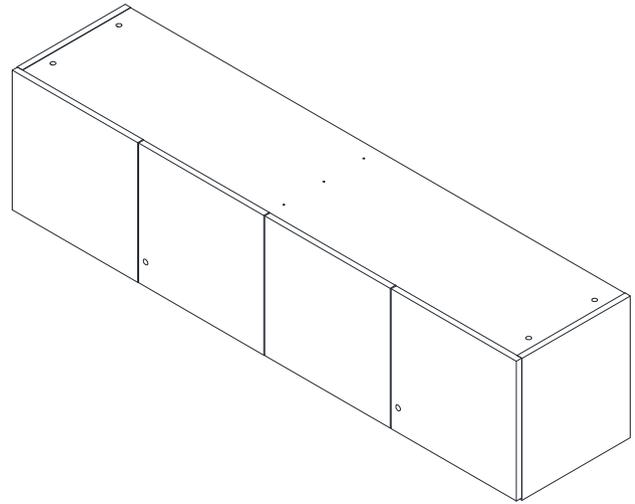


Figure 2

