


NOTE: Some components may be removed to access back panel.

VISION MODULAR

INSTALLATION OF A BENCH HEIGHT MODULAR FILLER BACK

Recommended Tools

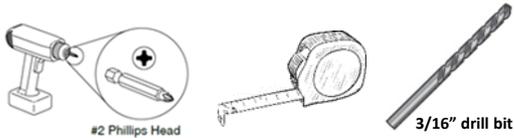

Hardware Needed



(4) #8 x 1-1/4" FHP
Screws

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.


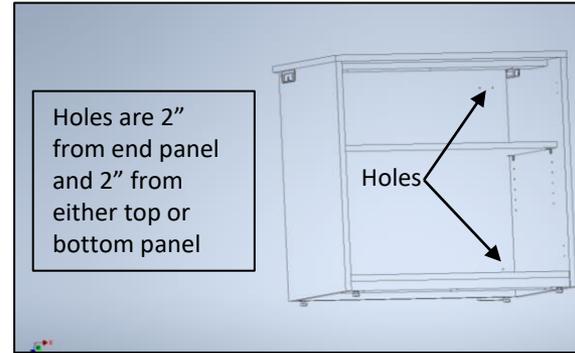


Figure 1

1. Drill 3/16" holes in the back panel of the unit as shown (Figure 1 & 2)
2. Position and secure the filler back panel so that it is flush on the sides and butted against the underside of the top panel using the #8 x 1-1/4" screws provided (Figure 2)

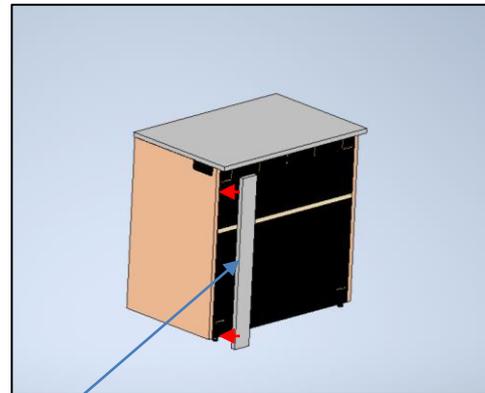

Filler Back Panel

Figure 2

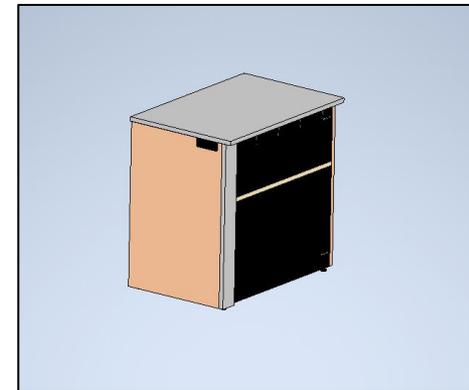


Figure 3