

NOTE: Use 5/8" screws when screwing into the back panel and use 1-1/2" screws when screwing into the top

VISION MODULAR

INSTALLATION OF A STANDARD HEIGHT MODULAR TOP

Figure 1



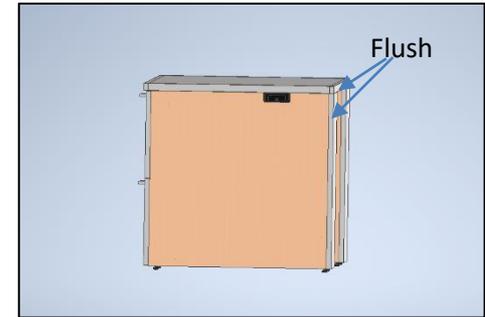


Figure 2

Recommended Tools

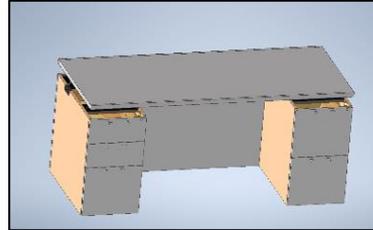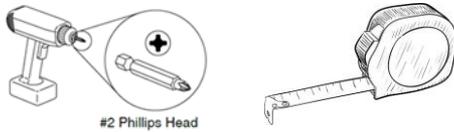

#2 Phillips Head

Installation Directions:

1. Lay top panel on pedestals or end panels. Panel should be centered horizontally and overhanging 3/16" over the front (Figure 2)
2. Insert #8 x 1-1/2" screws from the bottom through the holes located on the stretchers in each pedestal (Figure 3)
3. Position and secure the L-brackets (QTY VARIES) from your end panels or pedestals so that they are evenly spaced from each end of the back panel using #8 X 5/8" screws (Figure 4)

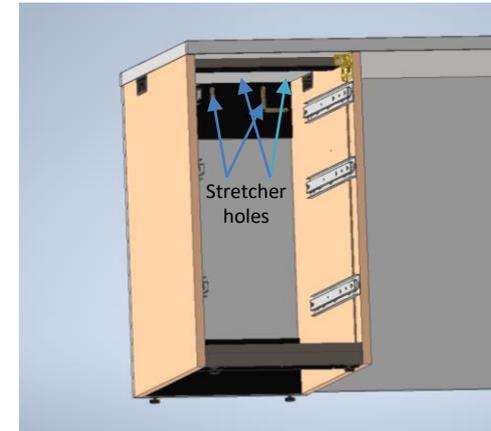


Figure 3

Hardware needed is enclosed with end panels or pedestals

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

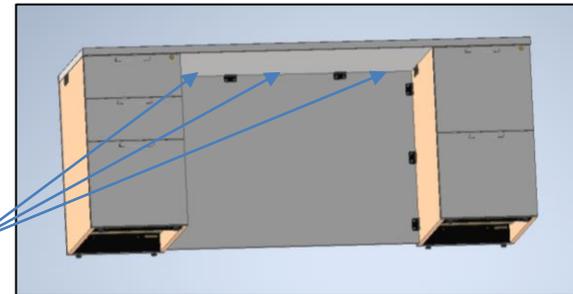


Figure 4