

NOTE: Depth of pedestals will determine position of modesty.

VISION MODULAR BREAKFRONT

INSTALLATION OF A MODULAR MODESTY PANEL

Pedestal Depth	Distance from Back of Desk to Modesty (A)
20"	¾"
24"	¾"
30"	3"
36"	3"

Figure 1

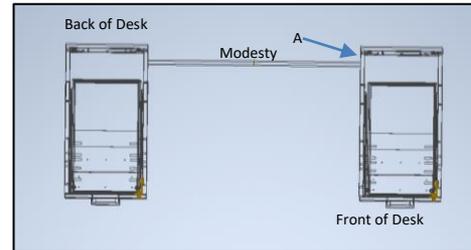


Figure 2


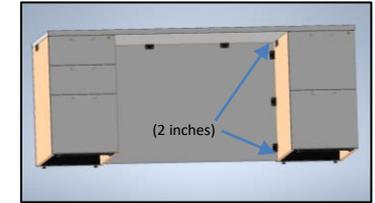


Figure 3

Recommended Tools



Hardware enclosed



#8 x5/8
PHP Screws
(QTY VARIES)





4-Hole L
Brackets
(QTY VARIES)

Installation Directions

1. Install the pedestals and top panel in accordance to their corresponding instructions.
2. The modesty will be offset from flush with the back of the pedestals. See figure 1 and 2 for details.
3. Using the #8 x 5/8 screws provided, position and secure the provided L brackets so that there is 2 inches between the top of the modesty and the leading edge of the L bracket on both the left and right sides of the panel. Position and secure two more brackets so that the leading edge of each is 2 inches from the bottom of the modesty on both the left and right sides of the modesty panel. Next, position and secure another bracket evenly between the two brackets on each side of the panel. (Figure 3)
4. Position and secure two more brackets along the top of the modesty panel and the bottom of the work surface so that they are equally distant from the pedestals using the screws provided (Figure 4).

Figure 4

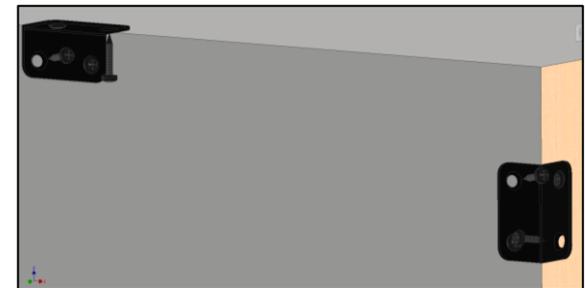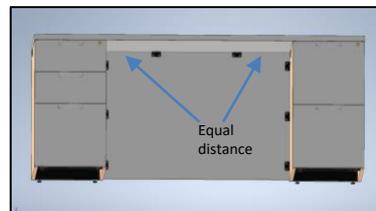

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.