

# Vision-GLASS MARKER BOARD

## Install Instructions

### Recommended Tools



### Hardware Included

- Z-strip taped to back of glass marker board

### Installation

Note: Contractor to determine correct fastener for wall attachment.

1. Determine the mounting height of the glass marker board.
2. Measure top of glass to bottom of Z clip, Figure A.
3. Use a level to mark the bottom of the Z-strip on wall.
4. Attach the provided cleats to the wall in accordance with local code (Figure B)
5. Back side of glass marker board shown (Figure C)

Figure A

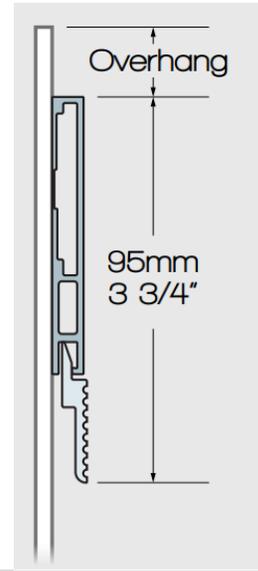


Figure B


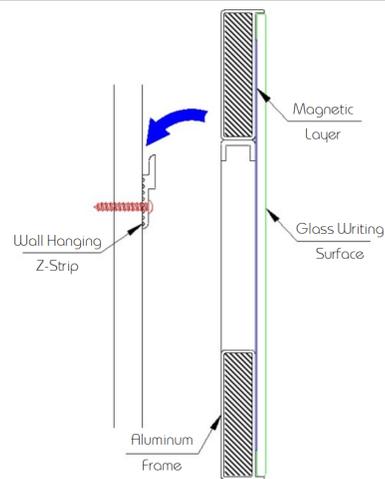


Figure C

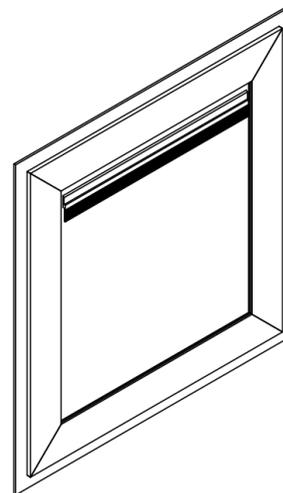

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.