


VISION MODULAR

INSTALLATION OF A STANDARD HEIGHT MODULAR FILLER BACK WITH DRAWER PEDESTALS

Recommended Tools

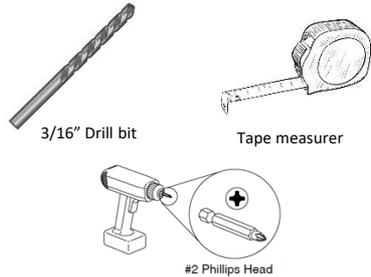

Hardware Needed



#8 x 1-1/4"
FHP Screws
QTY: 4

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Filler Back

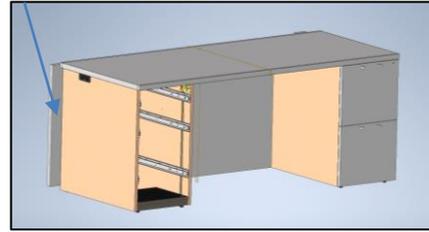


Figure 1

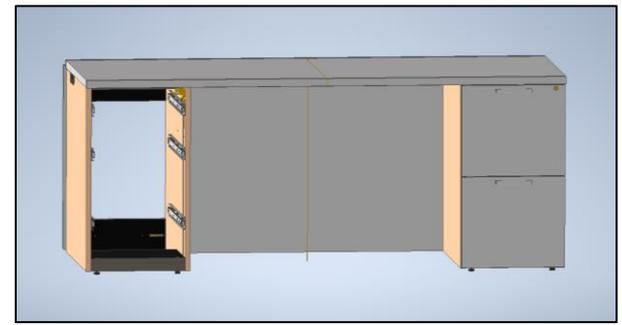


Figure 2

Installation Instructions:

1. Drill a 3/16" hole into the stretcher near the back of the pedestal 2 inches from the end panel and one inch lower than the top pre-drilled hole (Figure 3).
2. Position and secure the filler back panel to that it is directly under the overhanging top panel and it is flush with both the outermost side of the pedestal using the #8 x 1-1/4" FHP screws provided with the pedestal or end panel. The screws will go through the stretcher located on the inside of the pedestal and into the filler panel through the holes that were just drilled (Figure 3).
3. Repeat these steps at the bottom of the stretcher on inch above the pre-drilled hole.
4. Repeat these steps to install the other filler back to the other side of the assembly.



2 INCHES

Figure 3